

Corrected Codes for Programming your TiVo remote

Your TiVo remote has buttons for controlling the Power, Mute, and Volume of your TV. This allows you to set aside your TV remote, and use only the TiVo remote. These buttons need to be set to emit the correct Infrared codes for your Television brand.

Normally, these codes can be found within TiVo's on screen menus, under Setup, TV/AV Setup. However, we are shipping you an improved version of the TiVo remote, and consequently the Infrared codes that are listed in TiVo's on-screen display are incorrect. Please use the codes on this leaflet to program your remote instead.

Instructions:

1. Locate your TV brand on this list. It will have one or more 4-digit codes listed.
2. Cover the end of the remote with your hand to shield the infrared emitter and, on the TiVo remote, press and hold the TIVO and TV POWER buttons simultaneously for about three seconds, until the TiVo remote's LED illuminates. Release the buttons and the LED will remain illuminated.
3. Use the number buttons on your remote to enter the first four-digit code. After pressing the fourth button, the LED will flash three times, indicating that a valid code was entered.
4. Now test the code by pointing your TiVo remote in the direction of the TV and press the TV POWER button. If this turns the TV off, then you have found the correct code. (Your volume and mute buttons will now work as well.) If they don't work, repeat steps 2-3 with the next code in the list.
5. If you have a stereo hooked up to your TV for the audio, you can separately program the Volume and Mute buttons to control your stereo instead. Repeat steps 1-4, using the appropriate code for your stereo, and holding down the TIVO and VOLUME buttons in step 2.

If none of the codes listed work for your TV (or stereo), please call Customer Care at 08702-418486.

CODES FOR TELEVISIONS

A MARK:0103,0132
AKAI:0001,0160
AMPRO:0070,0164
AMSTRAD:0053
ANAM:0045,0055,0057,0076,0095,0099,0103,0106,0109,0112,0122
AOC:0001,0011,0103
BLAUPUNKT:0084
CANDLE:0001,0002,0003,0011
CAPEHART:0059
CETRONIC:0045
CITIZEN:0001,0002,0003,0011,0045,0092,0094,0132
CLASSIC:0045
CONCERTO:0011
CONTEC:0041,0045,0051,0052
CORONADO:0132
CRAIG:0045,0055,0157,0158,0159
CROWN:0045,0132
CURTIS,MATHES:0001,0092,0107,0132
CXC:0045
DAEWOOD:0011,0022,0023,0038,0045,0046,0056,0068,0073,0094,0098,0102,0105,0108,0111,0114,0116,0118,0119,0127,0132
DAYTRON:0107,0132
DYNASTY:0045
DYNATECH:0063
ELECTROHOME:0074,0132
EMERSON:0001,0012,0033,0045,0048,0049,0051,0052,0091,0107,0132,0137,0139,0141,0157,0158,0162
FISHER:0013,0058
FUNAI:0033,0045
FUTURETECH:0045
GE:0001,0014,0015,0038,0057,0070,0071,0107,0121,0133,0141,0145,0163
GOLDSTAR:0011,0093,0097,0101,0103,0104,0107,0110,0113,0118,0128,0132
HALL MARK:0107
HITACHI:0001,0011,0015,0016,0017,0018,0029,0043,0072,0132,0144,0147
INFINITY:0148
INKEL:0120
JBL:0148

CODES FOR TELEVISIONS (con't)

JCPENNY:0001,0011,0014,0015,0030,0035,0092,0132,0145
JENSEN:0019
JVC:0038,0040,0079,0134
KEC:0045
KENWOOD:0001
KLOSS:0002,0060
KMC:0132
KTV:0001,0045,0132,0162
LODGENET:0069
LOGIK:0069
LUXMAN:0011
LXI:0013,0021,0053,0077,0145,0148
MAGNAVOX:0001,0003,0011,0060,0061,0062,0064,0065,0118,0132,0145,0148
MARANTZ:0001,0074,0148
MATSUI:0148
MEMOREX:0013,0069,0107
METZ:0084
MGA:0001,0011,0033,0044,0050,0074,0107
MINERVA:0084
MITSUBISHI:0001,0011,0030,0033,0042,0044,0100,0107,0115,0154,0160,0167,0168
NAD:0021,0031
NEC:0001,0013,0022,0025,0030,0042,0057,0121,0123,0125
NIKEI:0045
ONKING:0045
ONWA:0045
OPTONICA:0025,0077
PANASONIC:0038,0057,0076,0087,0148
PHILCO:0001,0003,0011,0030,0045,0057,0060,0061,0064,

CODES FOR TELEVISIONS (con't)

RADIO SHACK:0025,0045,0048,0107,0118,0132
RCA:0001,0011,0029,0030,0057,0071,0133,0145,0161,0163
REALISTIC:0013,0025,0045,0048
RUNCO:0152,0153
SAMPO:0001,0059,0107
SAMSUNG:0051,0085,0092,0096,0104,0107,0118,0124,0128,0132,0145
SANYO:0013,0026,0027,0037,0041,0054,0058,0078
SCOTT:0033,0045,0049,0107,0132
SEARS:0011,0013,0021,0033,0035,0058,0078,0092,0107,0132,0145
SHARP:0011,0020,0025,0028,0033,0034,0077,0132,0154
SIEMENS:0084
SIGNATURE:0069
SONY:0043,0067,0075,0117,0130,0136
SOUNDESIGN:0003,0033,0045,0107
SPECTRICON:0103
SSS:0011,0045
SUPRE MACY:0002
SYLVANIA:0001,0003,0011,0060,0061,0064,0065,0107,0118,0131,0145,0148
TANDY:0077
TATUNG:0057,0063
TECHNICS:0080
TECHWOOD:0011
TEKNIKA:0001,0002,0003,0011,0030,0033,0036,0045,0069,0074,0092,0094,0132
TELEFUNKEN:0039,0047
TELERENT:0069
TERA:0156

PHILIPS:0001,0003,0011,0040,0060,0067,0088,0132,0145,
0148
PIONEER:0001,0024,0029,0031,0032,0107
PORTLAND:0011,0132
PROSCAN:0133
PROTON:0059,0107,0122,0132,0165
QUASAR:0038,0057,0087
RADIO SHACK:0025,0045,0048,0107,0118,0132
RCA:0001,0011,0029,0030,0057,0071,0133,0145,0161,0163
REALISTIC:0013,0025,0045,0048
RUNCO:0152,0153

TOSHIBA:0013,0021,0035,0042,0052,0063,0092,0129
TOTEVISION:0132
UNIVERSAL:0014,0015
VIDEO,CONCEPTS:0160
VIDTECH:0011,0107
WARDS:0011,0014,0015,0025,0033,0061,0062,0064,0065,
0069,0071,0107,0132,0148
YAMAHA:0001,0011
YORK:0107
YUPITERU:0045
ZENITH:0069,0070,0090,0094
ZONDA:0103